

LED-EMOTION F

1-channel remote control. One remote can be used for several Emotion-driver.



TECHNICAL DIMENSIONS AND PRODUCT VARIANTS

Material	[Plastic]
Colour	white
Length	9 cm
Height	10 mm
Width mm	50 mm

PRODUCT VARIANTS

Ident	Height	Colour	Length
EM FF 30-1	10 mm	white	9 cm

Data sheet Accessories

Stepless adjustment of light temperature (cool, neutral, warm white)

Dimming function

Auto memory

Only compatible with LED SET EF

1 remote control can control multiple LED SET EF, but 1 LED SET EF can only be controlled by 1 remote control

PROPERTIES

Stepless adjustment of light temperature (cool, neutral, warm white)

Dimming function

Auto memory

Only compatible with LED SET EF

1 remote control can control multiple LED SET EF, but 1 LED SET EF can only be controlled by 1 remote control

MATERIAL

Please note: For technical reasons, tolerances in color effects of the materials and print are possible.
All information is based on the best of our knowledge and belief. No guarantee can be derived from this.
We reserve the right to any technical changes if they are in the interest of progress or if they are production-related.



Plastic

PROCESSING

PROGRAMMING THE REMOTE CONTROL

To enable the remote control and receiver (LED SET EF) to communicate with each other, you must program the receiver and remote control.

1. Briefly press the button on the receiver.

The LED lights up blue. The receiver continuously transmits its address.

2. Hold the remote control within range. When using the remote control for the first time, please note that there is a transport tab in the remote control. The transport tab must be removed first.

3. Press and hold the ON/OFF button on the remote control for approx. 3 seconds.

The remote control saves the address of the receiver.

If the LED on the receiver flashes once and then goes out, the pairing process was successful.

Only one remote control can be programmed to a receiver. However, it can be combined with a two-button wireless switch and/or motion detector.

Direct pairing after the receiver has been connected to the mains (useful for receivers that are difficult to reach): After connecting to the mains, the receiver flashes for 60 seconds. During this time, briefly press the ON/OFF button on the remote control to pair it with the receiver.

OPERATING THE REMOTE CONTROL

Switching the lights ON/OFF

Press the ON/OFF button to switch the lights on.

Press the button again to switch the lights off.

Adjusting the colour temperature

Turn the rotary control to adjust the colour temperature between warm white and cool white.

Adjust brightness

You can adjust the brightness in four steps or continuously.

Step settings (100% - 75% - 50% - 25%)

Press the left arrow button to reduce the brightness.

Press the right arrow button to increase the brightness.

Continuous adjustment

Press and hold the left arrow button to reduce the brightness continuously.

Press and hold the right arrow button to increase the brightness continuously.

The generally accepted rules of technology and tiling must be observed. Suitability for use with mechanical and chemical resistance must always be checked in each individual case.

Please note: For technical reasons, tolerances in color effects of the materials and print are possible.
All information is based on the best of our knowledge and belief. No guarantee can be derived from this.
We reserve the right to any technical changes if they are in the interest of progress or if they are production-related.