

# LED-EMOTION W

Remote rocker switch. Operations: ON/OFF, brightness, colour temperature, Battery type CR 2430.



## TECHNICAL DIMENSIONS AND PRODUCT VARIANTS

|          |           |
|----------|-----------|
| Material | [Plastic] |
| Colour   | white     |
| Length   | 8.7 cm    |
| Height   | 15 mm     |
| Width mm | 87 mm     |

## PRODUCT VARIANTS

| Ident    | Height | Colour | Length |
|----------|--------|--------|--------|
| EM WS 30 | 15 mm  | white  | 8.7 cm |

## Data sheet Accessories

Function: On/Off,

Stepless adjustment of light temperature (cool, neutral, warm white)

Dimming function

Auto memory

Only compatible with LED SET EW

1 switch can control multiple LED SET EF, but 1 LED SET EF can only be controlled by 1 remote control

## PROPERTIES

Function: On/Off,

Stepless adjustment of light temperature (cool, neutral, warm white)

Dimming function

Auto memory

Only compatible with LED SET EW

1 switch can control multiple LED SET EF, but 1 LED SET EF can only be controlled by 1 remote control

Please note: For technical reasons, tolerances in color effects of the materials and print are possible.  
All information is based on the best of our knowledge and belief. No guarantee can be derived from this.  
We reserve the right to any technical changes if they are in the interest of progress or if they are production-related.



## MATERIAL

Plastic

## PROCESSING

Programming radio wall switches with double rocker

To enable radio wall switches and receivers (LED SET EW) to communicate with each other, you must program the receiver and switch.

1. Remove the transport tab from the wall switch. To do this, pull the button out of the frame. Then slide the flap on the back upwards and remove the battery and protective film. Reinsert the battery and close the battery compartment. Then press the button back into the frame.
2. Briefly press the button on the receiver. The teaching mode is activated for approx. 10 seconds.
3. Briefly press the power button on the wall switch.

The wall switch is now programmed. The connected lights will flash once to confirm.

Up to 6 wall switches can be programmed to a receiver. If you have problems programming a remote control/wall switch, reset the receiver.

To teach several receivers to a remote control/wall switch, repeat the teaching procedure for each receiver. The number of receivers that can be taught is theoretically unlimited.

Operating wireless wall switches with double rocker

Operating wireless wall switches with double rocker

Switching lights ON/OFF

To switch the lights on and off, briefly press the power button.

If the lights have been switched on or off by another wall switch, you will need to press the power button twice.

Set the colour temperature

To set the colour temperature, press the emotion buttons on the right rocker switch:

Press and hold the WW emotion button to make the colour temperature warmer.

Pressing briefly will gradually make the colour temperature warmer.

Press and hold the CW emotion button to make the colour temperature cooler.

Press briefly to make the colour temperature colder in steps.

Adjusting the brightness

Press and hold the dim button to change the brightness of the lights.

The generally accepted rules of technology and tiling must be observed. Suitability for use with mechanical and chemical resistance must always be checked in each individual case.

Please note: For technical reasons, tolerances in color effects of the materials and print are possible.  
All information is based on the best of our knowledge and belief. No guarantee can be derived from this.  
We reserve the right to any technical changes if they are in the interest of progress or if they are production-related.