

01

Fitting Instructions

Range 01 Slim Fit Access Panel

Scan for
Fitting
Video


Apply intumescent sealant to the rear of the frame before installing Fire Rated Panels.

For a Beaded Frame Panel, apply skim tape prior to plastering.


Independent bracing or support may be required to take the weight of the panel.



To remove the door from the frame; Open the door & release the hinge bolts slightly and lift the door out.

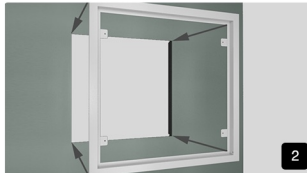

Place the frame into the aperture ensuring the aperture is 7mm larger than the panel size. Mark the position of the hinge pins located towards the hinge side.

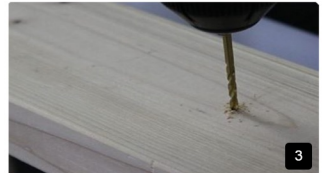

Remove the frame & drill clearance holes for the hinge pins as previously marked.



Fix the frame into the aperture by bending back the fixing tabs and using all the fixing holes to secure in place. Ensure frame is square by measuring diagonally & flush to the wall / ceiling. If fire, acoustic or airtight rated apply Intumescent acrylic mastic on the rear of the frame jamb prior to installing the frame.



Refit the door by tightening the hinge pins back in place then close the door. Lock the door in place with key provided & ensure the door is flush when closed.



For a beaded framed panel, apply skim tape prior to plastering. If fire, acoustic or airtight rated apply Intumescent acrylic mastic to the rear of the frame, nominally 5mm wide sealing to the supporting construction.

QUALITY ASSURANCE

Please sign both

Sign

Ref

FIRE RATING

Please tick one

☐

Non

☐

1 Hour

☐

90 Mins

☐

2 Hour