

TAKEOUT / PORTABLE TABLE LIGHT

ACTION: PORTABLE LIGHT

KNURL: CROSS

RANGE: TAKEOUT


Takeout is a portable table light made from solid metal and featuring our signature cross-knurl. The light features our unique B+P light pipe, housed in a toughened glass shade, and is 'step dimmable' at a touch.

With a run time of around 14 hours at full power, Takeout is IP65 wet rated and suitable for use outdoors. The light is available in our brass or steel finishes to match other Buster + Punch detailing, lighting and hardware in an interior.

Please note: The charging cable is included, within the main package, in its own small black box. Be sure to remove it before recycling the packaging.



3.2"
82 mm

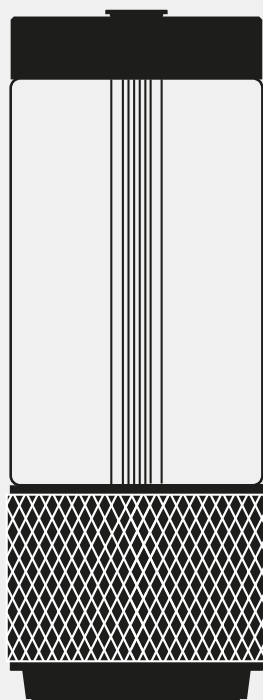

8.7"
220 mm

SPECIFICATIONS

Dimming Type - Touch button, with step dimming
Operating Period - 14+ hours at maximum brightness
Charge Time - 5-6 hours (temperature dependent)
Charge Method - Magnetic USB Type-A charging cable (provided)
Light Source - Integrated LED
IP Rating - IP65
Dimming Levels - 100%, 60% & 40%
Light Temperature - 2700K - warm white
CRI - 80+
Maximum Light Output - 130lm
LED Lifetime - 25,000 hours +
Operating Temperature Range 0 to 40°C / 32 to 104°F
Weight - 1.27 kg
Battery Type - LiFePO4 (lithium iron phosphate)
Battery Spec - 8Ah 3.2V 25.6Wh

FINISH & SKU NUMBERS

sku:	finish:	size:
UST-054282	● brass	∅3.2x8.7inches
UST-074283	● steel	∅3.2x8.7inches

INCLUDED

1 x Takeout Portable Light
1 x USB Type-A Charging Cable
1 x Branded Fabric Bag

PLEASE NOTE

Fragile - handle with care, broken glass may cause injury.
Please ensure product is completely dry and ahead of charging.
Do not charge if cable is damaged.
Due to the IP rating, the LED and battery cannot be replaced,
please contact our customer support team with any queries.
Please contact our customer support team with any operating
issues, do not attempt to disassemble the product.
This product contains a non-removable, embedded battery. Do
not dispose of this product in household waste. Please take it to
a local recycling facility, certified e-waste site, or battery
collection point.

CARE INSTRUCTIONS

The product can be cleaned with a soft damp cloth and mild
detergent, or a dry microfibre cloth. Do not use alcohol or any
other solvents to clean the product and avoid using abrasive or
rough sponges. Ensure that the power cable has been
disconnected before cleaning the product.
Depending on environmental conditions, the product may require
more frequent cleaning.
Product battery will drain if not used for long periods, please
ensure Takeout is fully charged before switching on again.