


FLORENTOSTEP

End Cap For Florentine-style Stair Nosing Profile



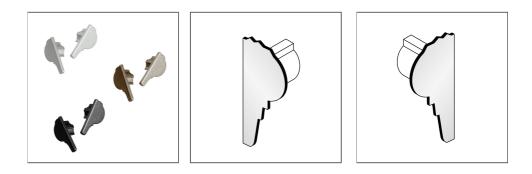

MATERIAL

Aluminium can be used wherever a medium mechanical load-bearing capacity is to be expected. Contact with alkaline materials (e.g. tile adhesive) can lead to discolouration, which can hardly be removed afterwards. High humidity during the drying phase can intensify this process. Always wipe off tile adhesive or grout on visible surfaces immediately with plenty of water, then wipe dry and ensure that the room is well ventilated.

Suitability in terms of mechanical and chemical resistance must always be checked on a case-by-case basis.

CARE

Aluminium does not require any special care. If necessary, it can simply be damp-cleaned with clear, clean water and a few drops of washing-up liquid. Then wipe dry.

Acidic and abrasive cleaning agents should be avoided.

PROCESSING

- 1. Select the profile according to the tile thickness.
- 2 Apply tile adhesive with a notched trowel.
- 3 Press the profile into the adhesive bed and align.
- 4. Fill over the entire surface of the fixing leg.
- 5. Press the tiles firmly into place and align them so that they are flush with the upper edge of the profile. Lay the tiles fully flush.
- 6 Use suitable inner or outer corner pieces.
- 7. Leave a joint of 1-2 mm to the profile.
- 8. Fill the space between the tiles and the profile completely with grout.

Protect visible surfaces from contact with tile adhesive or grout and, if necessary, clean immediately with a cloth and clean water. Then rub dry.

The generally recognised rules of technology must be observed. Suitability in terms of mechanical and chemical resistance must always be checked on a case-by-case basis.

Please note: For technical reasons, tolerances in color effects of the materials and print are possible. All information is based on the best of our knowledge and belief. No guarantee can be derived from this. We reserve the right to any technical changes if they are in the interest of progress or if they are production-related.

 DURAL GmbH | Südring 11 | D-56412 Ruppach-Goldhausen | Germany | +49 2602/9261-0 | info@dural.com

 DURAL Ltd. | Unit 6a | Wakefield Business Centre Denby Dale Rd | Wakefield | WF2 7AZ | United Kingdom | ukinfo@dural.com

The recognised standards and regulations of technology must be observed. Previous data sheets are invalid.



TECHNICAL DIMENSIONS AND PRODUCT VARIANTS

Material	[Metal die-cast]		
Surface	[powder coated], [anodised]		
Colour	titanium, silver, black matt (RAL 9005)		
Height	13.5 mm, 9 mm, 11 mm		

PRODUCT VARIANTS

Ident	Height	Surface	Colour
FSTAE 90-XKL/2	9 mm	anodised	silver
FSTAE 90-XKR/2	9 mm	anodised	silver
FSTAE 90-T-XKL/2	9 mm	anodised	titanium
FSTAE 90-T-XKR/2	9 mm	anodised	titanium
FSTACM 911-XKL/2	9 mm	powder coated	black matt (RAL 9005)
FSTACM 911-XKR/2	9 mm	powder coated	black matt (RAL 9005)
FSTAE 110-XKL/2	11 mm	anodised	silver
FSTAE 110-XKR/2	11 mm	anodised	silver
FSTAE 110-T-XKL/2	11 mm	anodised	titanium
FSTAE 110-T-XKR/2	11 mm	anodised	titanium
FSTACM 1111-XKL/2	11 mm	powder coated	black matt (RAL 9005)
FSTACM 1111-XKR/2	11 mm	powder coated	black matt (RAL 9005)
FSTAE 135-XKL/2	13.5 mm	anodised	silver
FSTAE 135-XKR/2	13.5 mm	anodised	silver
FSTACM 1311-XKL/2	13.5 mm	powder coated	black matt (RAL 9005)
FSTACM 1311-XKR/2	13.5 mm	powder coated	black matt (RAL 9005)

Please note: For technical reasons, tolerances in color effects of the materials and print are possible. All information is based on the best of our knowledge and belief. No guarantee can be derived from this. We reserve the right to any technical changes if they are in the interest of progress or if they are production-related.

DURAL GmbH | Südring 11 | D-56412 Ruppach-Goldhausen | Germany | +49 2602/9261-0 | info@dural.com

DURAL Ltd. | Unit 6a | Wakefield Business Centre Denby Dale Rd | Wakefield | WF2 7AZ | United Kingdom | ukinfo@dural.com

The recognised standards and regulations of technology must be observed. Previous data sheets are invalid.